


MARANTEC Product manual

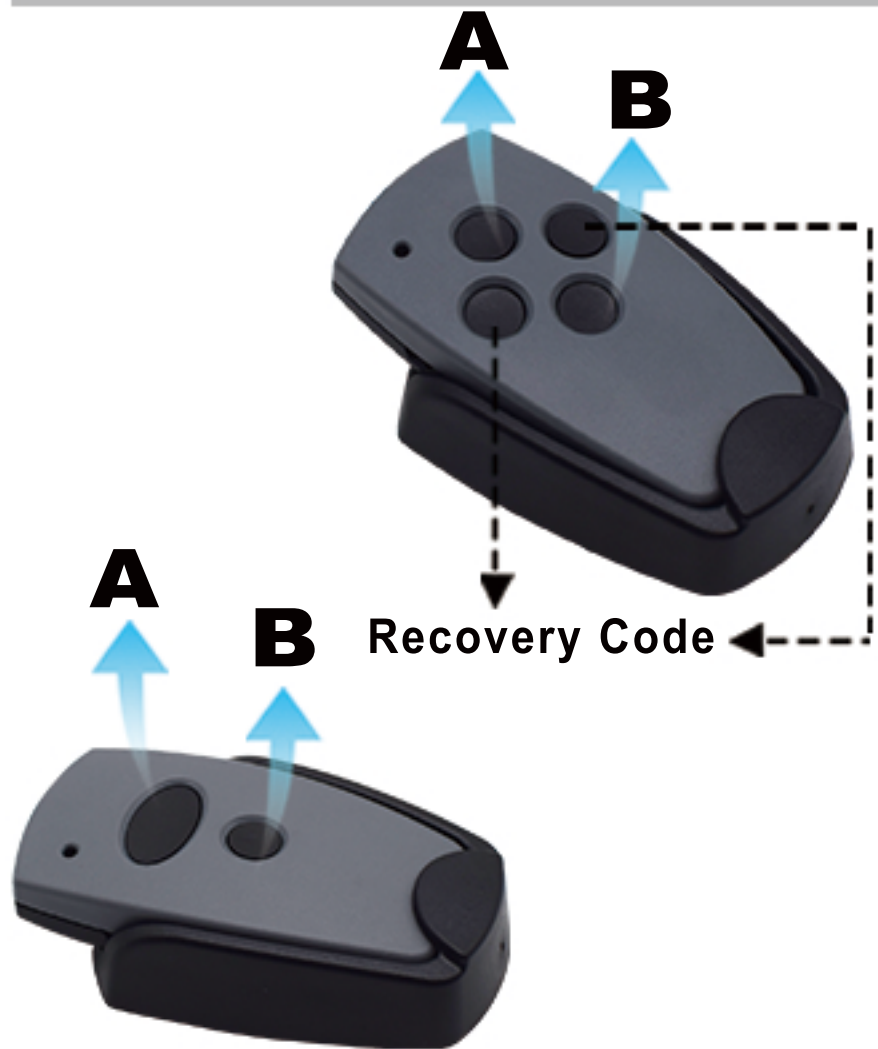

Product name: MARANTEC Digital 304

Frequency: 868.3MHz

Battery: CR2032 X1

Size:

Remote control: 72mmX36mmX13mm

Base: 65mmX51mmX16mm

Face To Face Copy Your Original Remote Control

Step:1: Clear the history code from duplicator

1. Press button A and B continuously until LED flash 3 times
2. Release button B (Keep pressing button A),and press button B Slowly for 3 times,LED flash
3. Release button "A",finish code clearance.

Step 2: Copy code from original transmitter

1. Put duplicator aside of original transmitter,as close as possible.
2. Press and hold button A of original transmitter,then press and hold button A of duplicator until you see the duplicator's LED flash
3. Release both buttons,finish code copy,copy other button in same way.