

智能门禁


K2/K2F

使用说明


智能门禁 K2/K2F

产品型号：	K2/K2F
尺 寸：	W79mm x H125mm x T15.5mm
材 质：	铝合金框架/玻璃面板
通信方式：	Bluetooth 4.1
支持系统：	Android 4.3/iOS7.0 above
待机电流：	≈5mA
动作电流：	≈1A
供电方式：	12V
开锁时间：	≈1.5S
防水等级：	IP66
卡片容量：	20000张
指纹容量（可选）：	120

包装配件

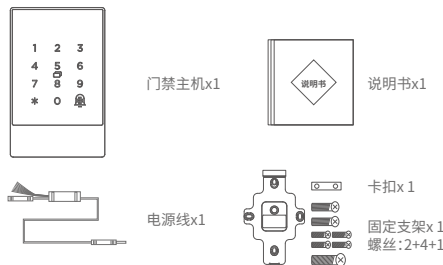


安装步骤

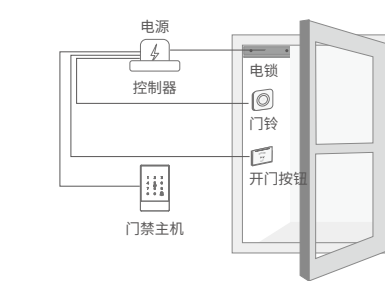


1. 开孔

在合适的位置上,打通门禁线缆连接电源的线槽。

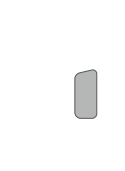


2. 安装固定支架

在门禁线槽位置上,用自攻螺丝将固定支架固定。

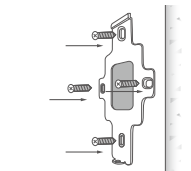


3. 接线

将门禁线缆分别接通到电源及对应线束上。

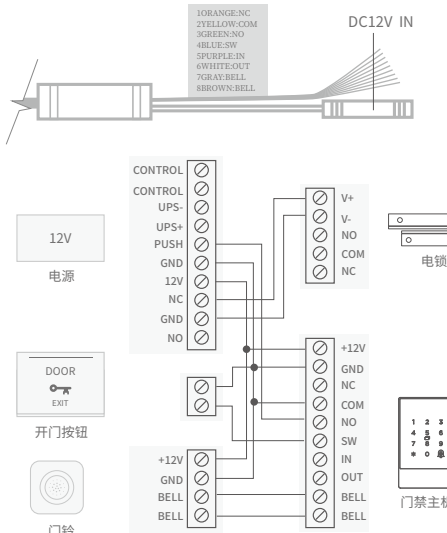


4. 安装卡扣

将主机背面上的卡扣用螺丝固定。

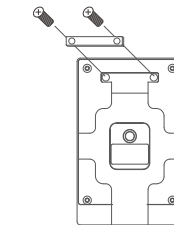

5. 安装主机

将主机装入到固定支架后,用螺丝固定。

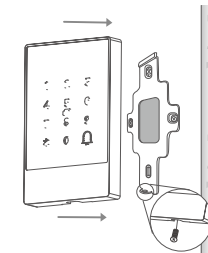

添加门禁(绑定管理员)

1. 点按触摸屏任意数字激活门锁



2. 在听到“请添加蓝牙管理员”语音提示后,打开 app 软件



3. 点击左上角“≡”进入“添加锁”,选择门锁(门禁)类型



4. 点击发现的锁设备名称,等待几秒钟,直至锁发出一声长“滴”或语音提示“添加成功”



● 注意:如果通过以上步骤未能成功添加锁,请关闭手机APP,关闭手机蓝牙后再重新打开APP与蓝牙,重复以上步骤。

产品保修说明

- 1、自购买产品之日起7日内,若产品出现非人为损坏的质量问题,可以选择按购买价格退货或更换同型号产品;
- 2、自购买产品之日起至第十五日内,若产品出现非人为损坏的质量问题,可以选择免费更换同型号的产品;
- 3、自购买产品之日起12个月内,若产品出现非人为损坏的性能故障,提供免费保修服务。

SMART ACCESS CONTROLLER


K2/K2F

Manual


Smart Access Controller K2/K2F

Model :	K2/K2F
Dimensions :	W79mm x H125mm x T15.5mm
Material :	Aluminum frame/Tempered glass panel
Communication :	Bluetooth 4.1
Supporting systems :	Android 4.3/IOS7.0 above
Stand-by current :	≈5mA
Operating current :	≈1A
Power supply :	12V
Unlocking time:	≈1.5S
Waterproof level :	IP66
Card capacity:	20,000 Cards
Fingerprint capacity*:	120

Accessories

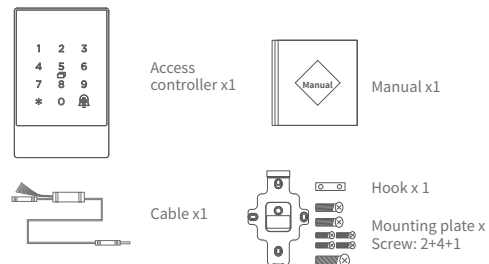

Illustration

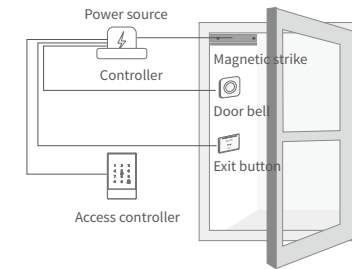


- 1 Drill a hole for the cable
- 2 Install the mounting plate

Drill a hole at appropriate position to make space for the cable to connect to the power source.




3 Wiring

Connect the cable of the access controller to power cable and other ports according to the illustration.

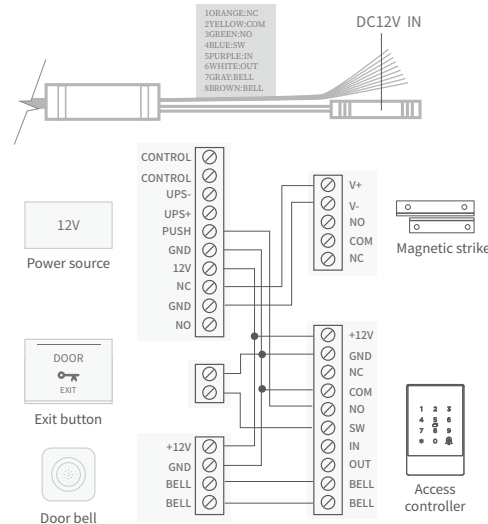


4 Install the hook

Fix the hook to the mounting plate with 2 screws.

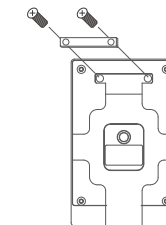

5 Install the access controller

Fit the access controller into the hook and fix it on the mounting plate with a screw in the bottom.

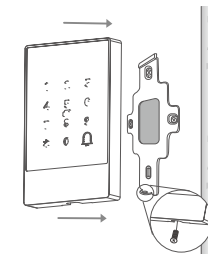

Pair the access controller with app

- 1 Tap the panel to light it up and activate the lock.
- 2 On voice prompt "Please add Bluetooth Administrator", activate the APP.
- 3 Tap the "≡" icon on the upper left corner, tap "+Add Lock", select "Door Lock".
- 4 Tap the device shown on the screen. Wait a few seconds till the lock gives a voice prompt/long beep, which means it is added successfully.



⚠ Notice: If fails, please shut off the APP and Bluetooth, turn them on and try the above process again.

Limited Warranty

1. For any defect in material and workmanship, the original purchaser of the product
 - 1) Can return or ask for a replacement within 7 invoice days.
 - 2) Can ask for a replacement within 15 invoice days.
 - 3) Can ask for free repair in 365 invoice days.
2. This warranty does not cover defects caused by modification, alteration, misuse or physical abuse of the product.