

SMG-862 Somfy Compatible Receiver 433.42Mhz

Tech Specs

The Compatible RTS receiver with dry contact is a receiver which enables control of the roller shutters and curtains 12/24V AC DC. It is compatible with most RTS transmitters, Somfy Standard Tube Motors and Somfy Curtains, not compatible with the new collection IO SOMFY

1) Frequency: 433,42 MHz

2) Power Supply: 12/24V AC DC (12V shorten JUMPER 2 PIN 1-2, 24V shorten JUMPER 2 PIN 2-3)

Number of relays: 2

Number of programmable remote controls: 48 per relay (96 in total)

Code: Rolling code (RTS)


Option to increase radio range by antenna

Protection index: IP 55

Compatibility: All low-voltage Somfy RTS (Radio Technology Somfy) motors (Put on jumper 1, it's for curtain remotes, take off jumper 1, it's for garage door remotes)

Operating temperature: -20°C +70°C

Dimensions (WxHxD): 85 x 85 x 50 mm

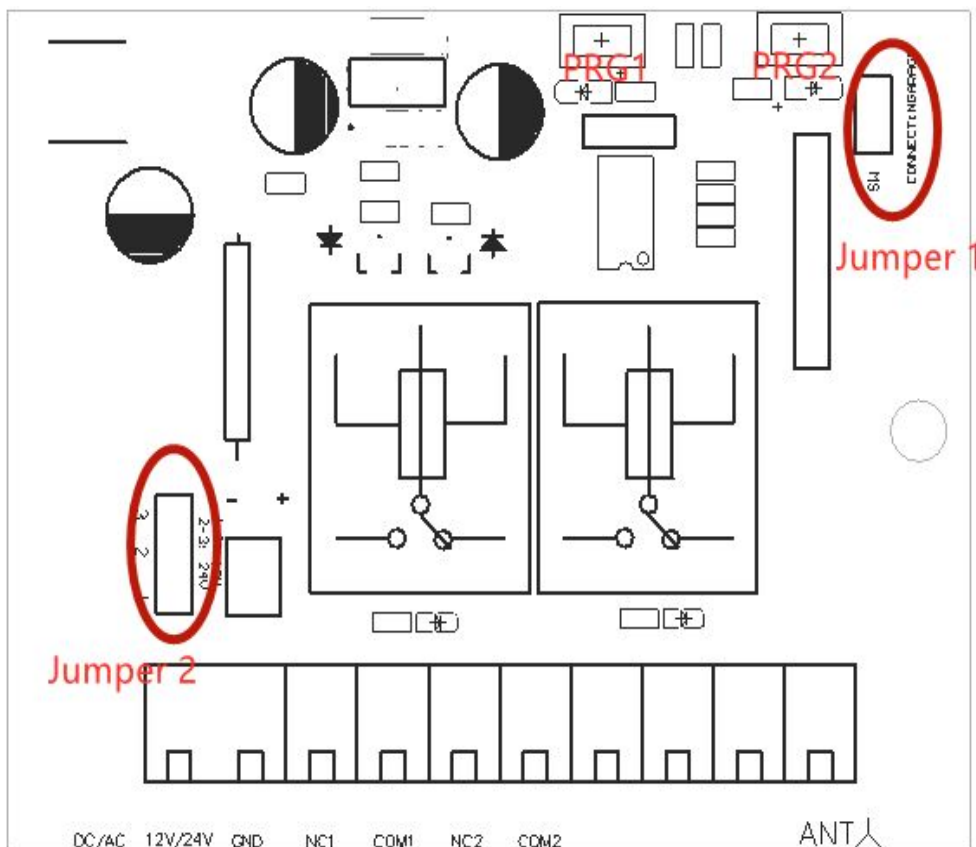

1. Learning transmitter's codes:

Press PRG 1 or PRG 2 for 2-3 second, the LEARN LED will be on, then, press the button which you choose on the transmitter till the "learn_led" flash and go out, the transmitter's code has been stored.

- Repeat the above steps for other transmitters.

2. Erasing transmitter's codes:

Press "PRG 1" or "PRG 2" and hold on to make the "learn_led light till go out

PRG 1 to delete channel 1

PRG 2 to delete channel 2